

# Kayak Fishing Anchor Kit

## Mounting instructions

- 1 Start by taking the short section of provided rope and folding it in half. At that half way point tie it onto the o-ring as pictured in Fig. 1.
- 2 Once the o-ring is tied on, you can attach one of the provided carabineers to the bow or stern of your boat and the second, someplace close to your cockpit. See fig. 2  
Note; If you do not have any deck lines or a permanent tie down in the place you would like your anchor kit attached, then it may be necessary to afix permanent eyelets in the desired location.
- 3 Now tie the short section of rope to the 2 carabineers in a circular fashion to create a "close line" effect. See figure 2. Once the anchor is attached, this will allow you to put the anchor in the water from where you are sitting, but move the anchor connection point out to your bow or stern. Thus making it safer, and more stable in wind and waves.
- 4 Once the short deployment line has been attached, you can string your anchor through the o-ring. You will need to find a good place to tie off your anchor line

### Warning

the anchor has been set.  
Be aware of other boaters: The anchor line can be entangled in a motor propeller, reel, paddles, or other devices.  
Due to the fact that Seattle Sports does not have control over how this device is used, Seattle Sports disclaims any and all liability for damage or injury that might occur as a result of the improper use of this product.

### Warranty

Seattle Sports Company warranties all new product to be free of any defects in material or workmanship, when used under normal conditions by the original purchaser, for a period one year form the date of purchase.

**Seattle Sports Company**  
Manufacturers of Superior Outdoor Gear

**Seattle Sports Company**  
3217 W. Smith Street #1  
Seattle, WA 98199



© Copyright 2006 Seattle Sports Co.

Figure 1

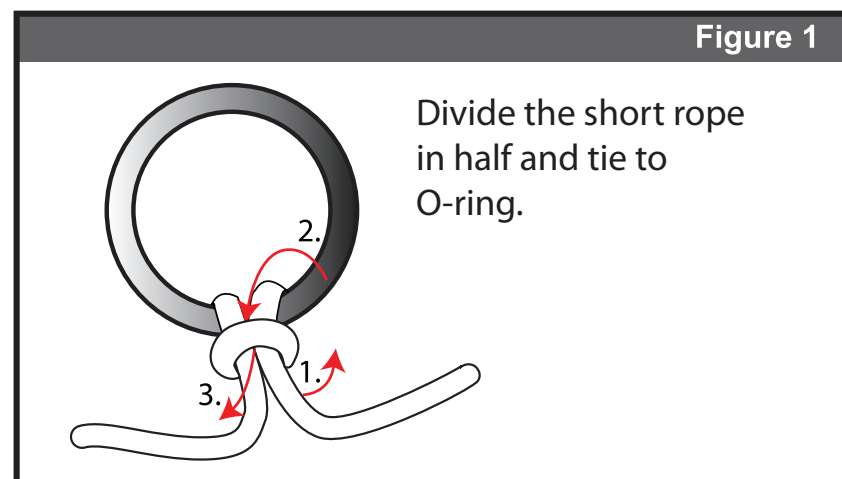 


Figure 2

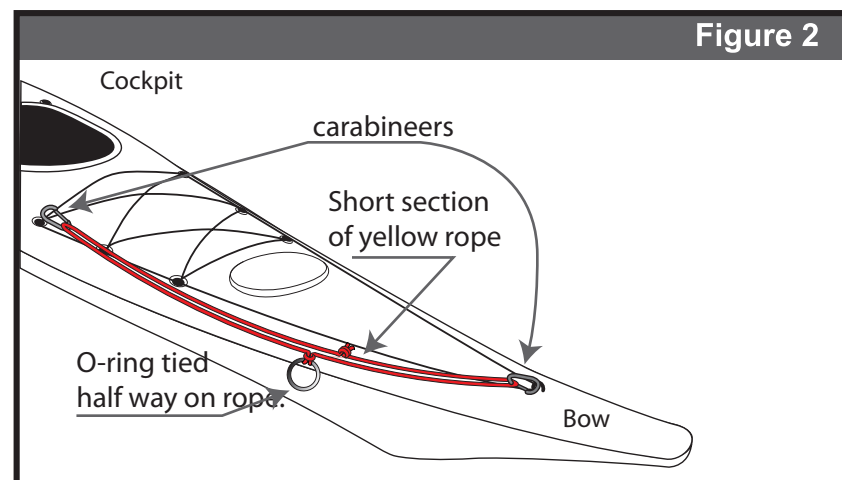 


Figure 3

